







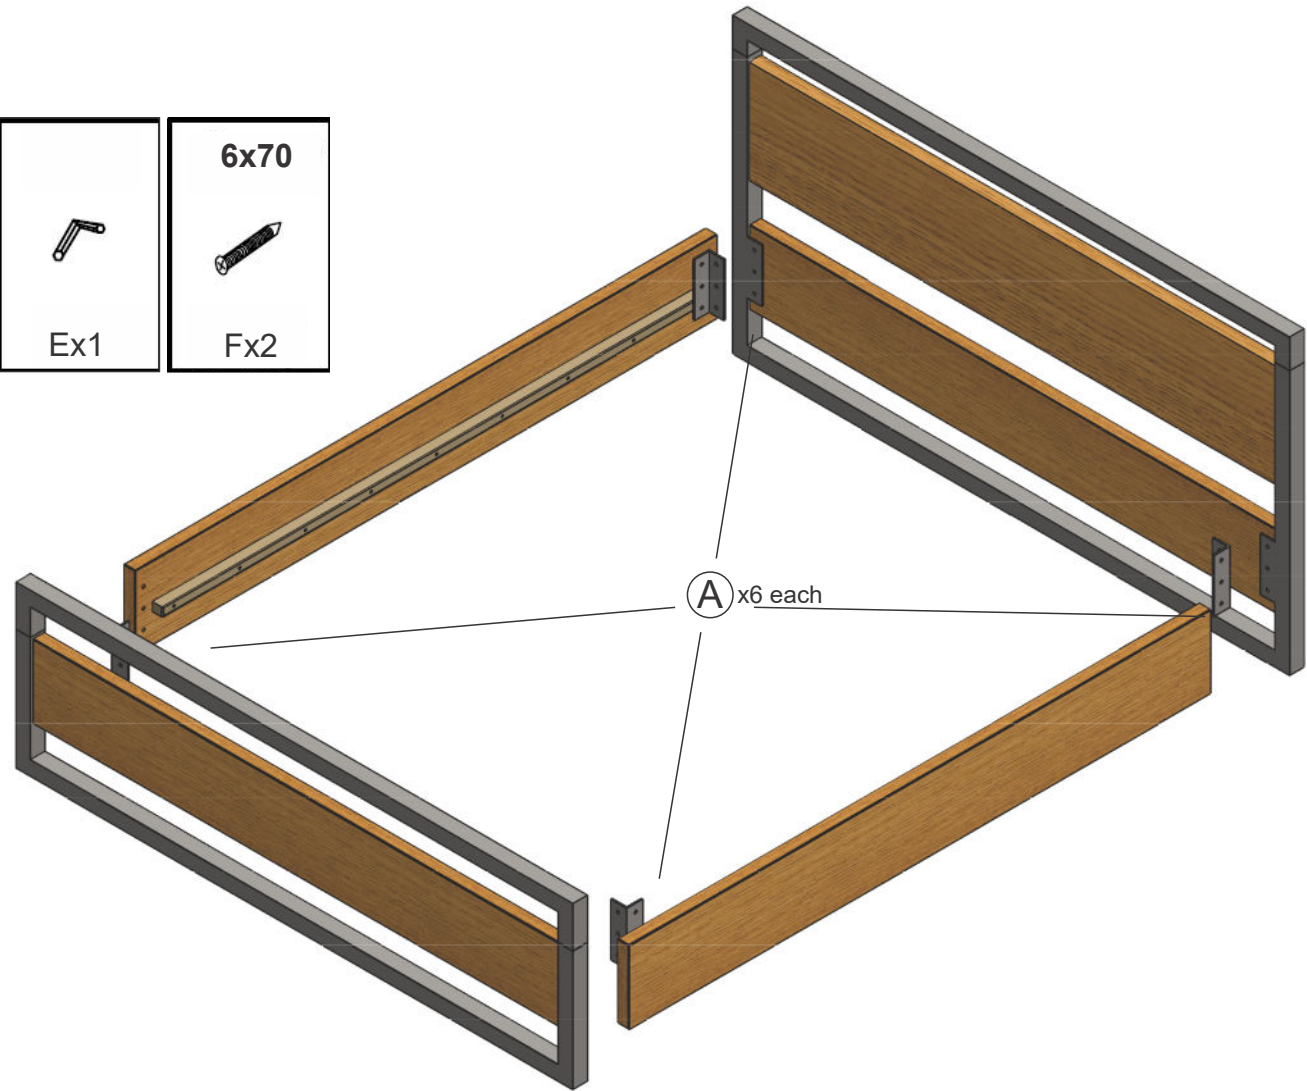










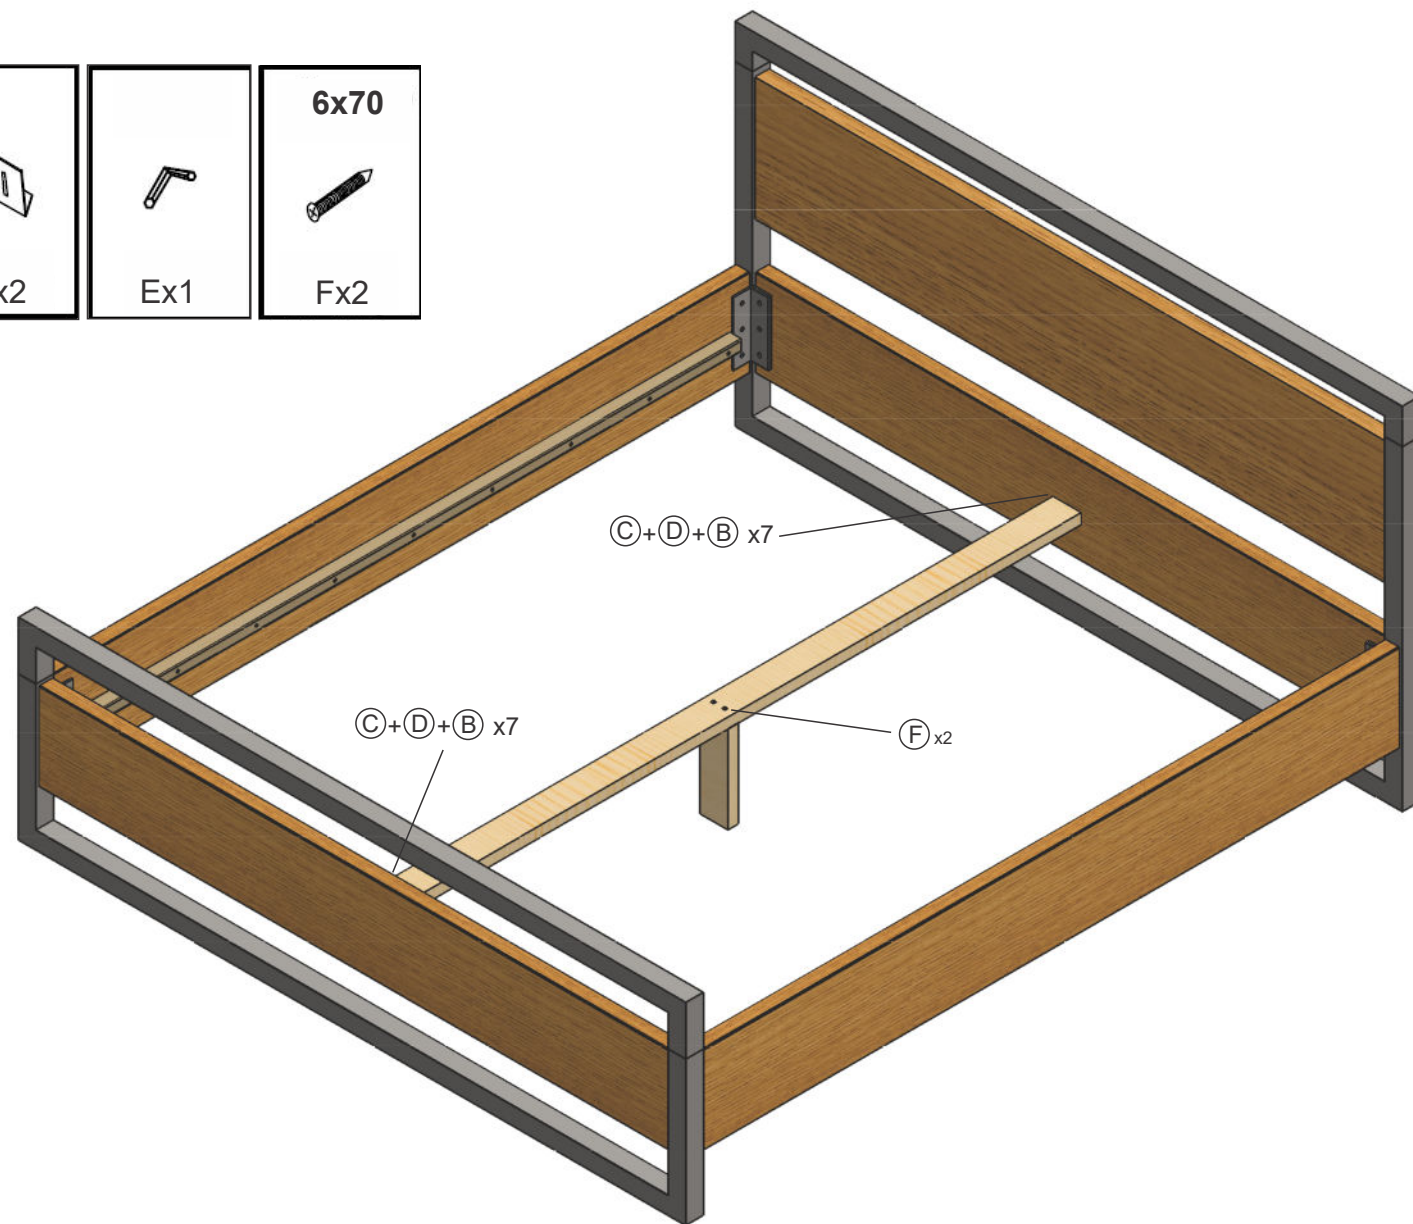
BED OLIVIE - ASSEMBLY INSTRUCTION

M6x30  12 packed 16 on bed Ax28	3,5x30  Bx44	 Cx2	 Dx2	 Ex1	6x70  Fx2
Black flat  Gx8	Distancer  Hx1				











BED OLIVIE 180 - ASSEMBLY INSTRUCTION

M6x30  12 packed 16 on bed Ax28	3,5x30  Bx44	 Cx2	 Dx2	 Ex1	6x70  Fx2
Black flat  Gx8	Distancer  Hx1				



BED OLIVIE 180 3 - ASSEMBLY INSTRUCTION

M6x30  12 packed 16 on bed Ax28	3,5x30  Bx44	 Cx2	 Dx2	 Ex1	6x70  Fx2
Black flat  Gx8	Distancer  Hx1				

