


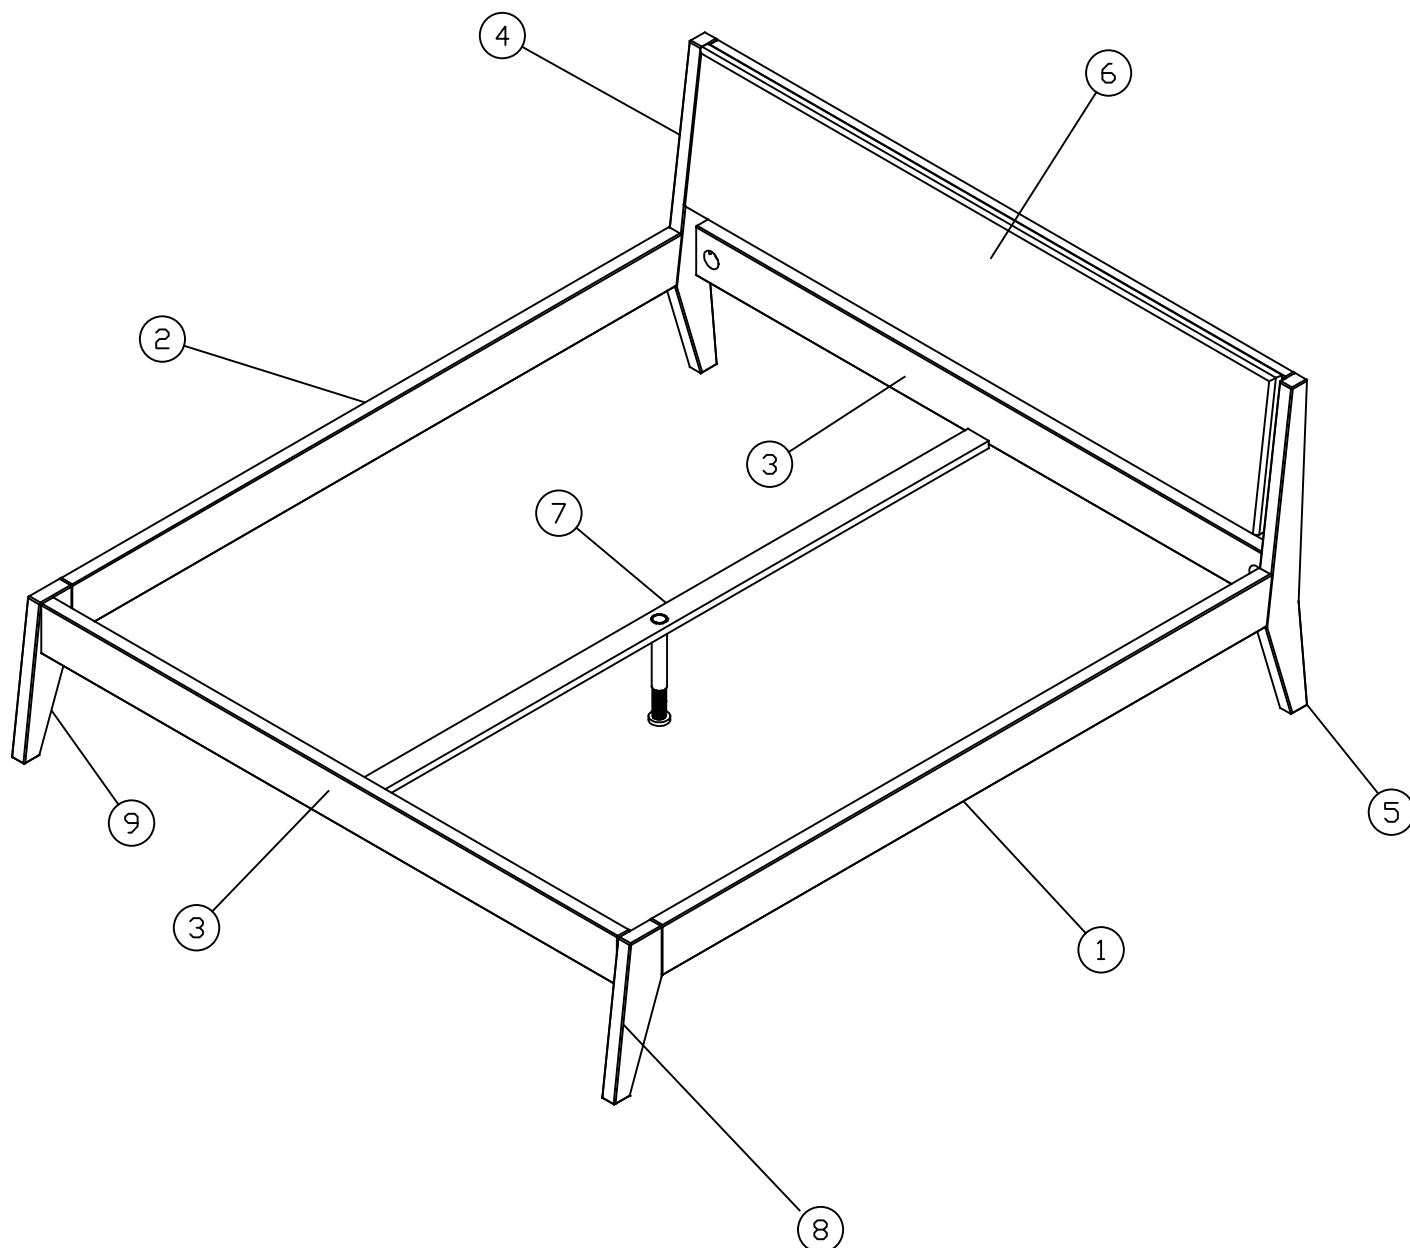










BED KING - ASSEMBLY INSTRUCTION







40 Minutes

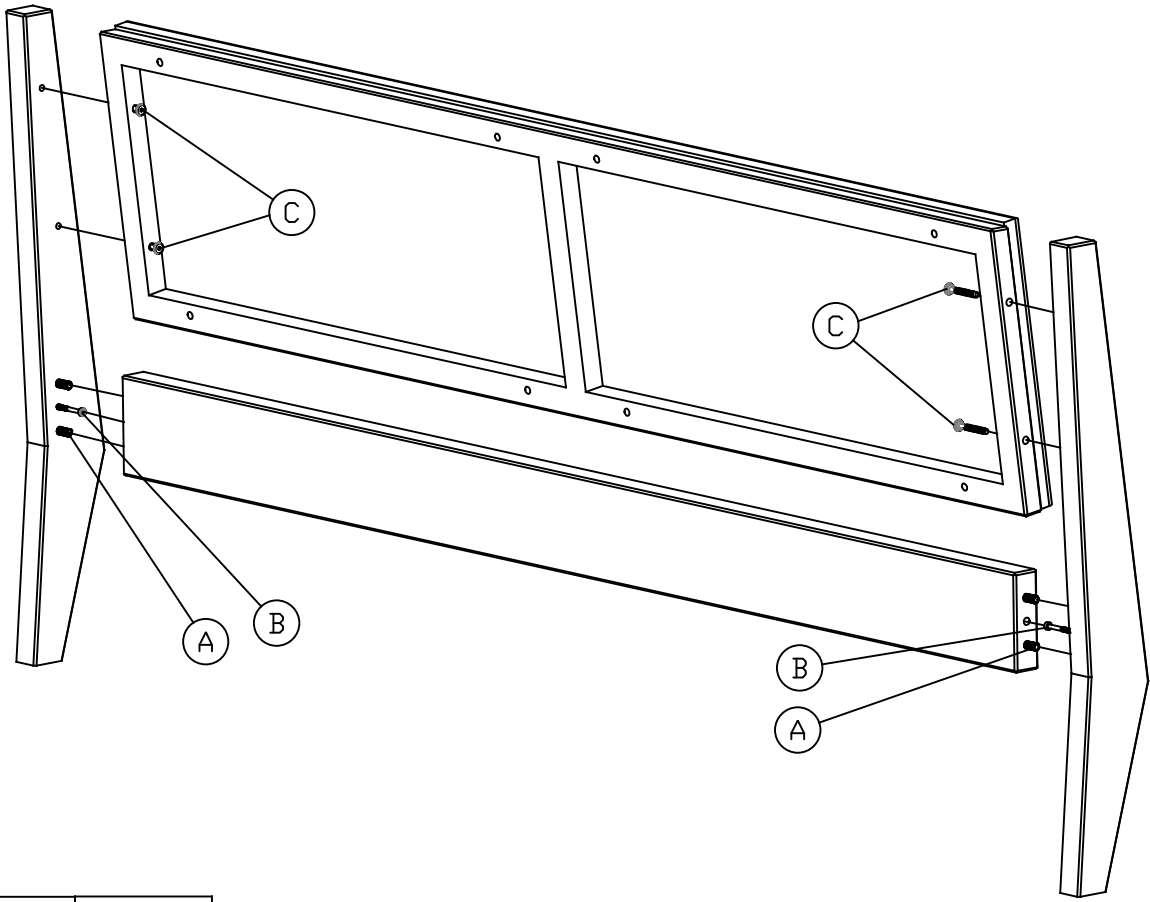


<p>Ø10x40</p>  <p>Ax16</p>	<p>M6x50</p>  <p>Bx8</p>	<p>M6x55</p>  <p>Cx4</p>	 <p>Dx8</p>	 <p>Ex2</p>	 <p>Fx2</p>	 <p>Gx2</p>	<p>3,5x20</p>  <p>Hx14</p>	<p>SW 5</p>  <p>1x</p>	<p>SW 4</p>  <p>1x</p>
--	---	---	--	--	--	---	---	---	---






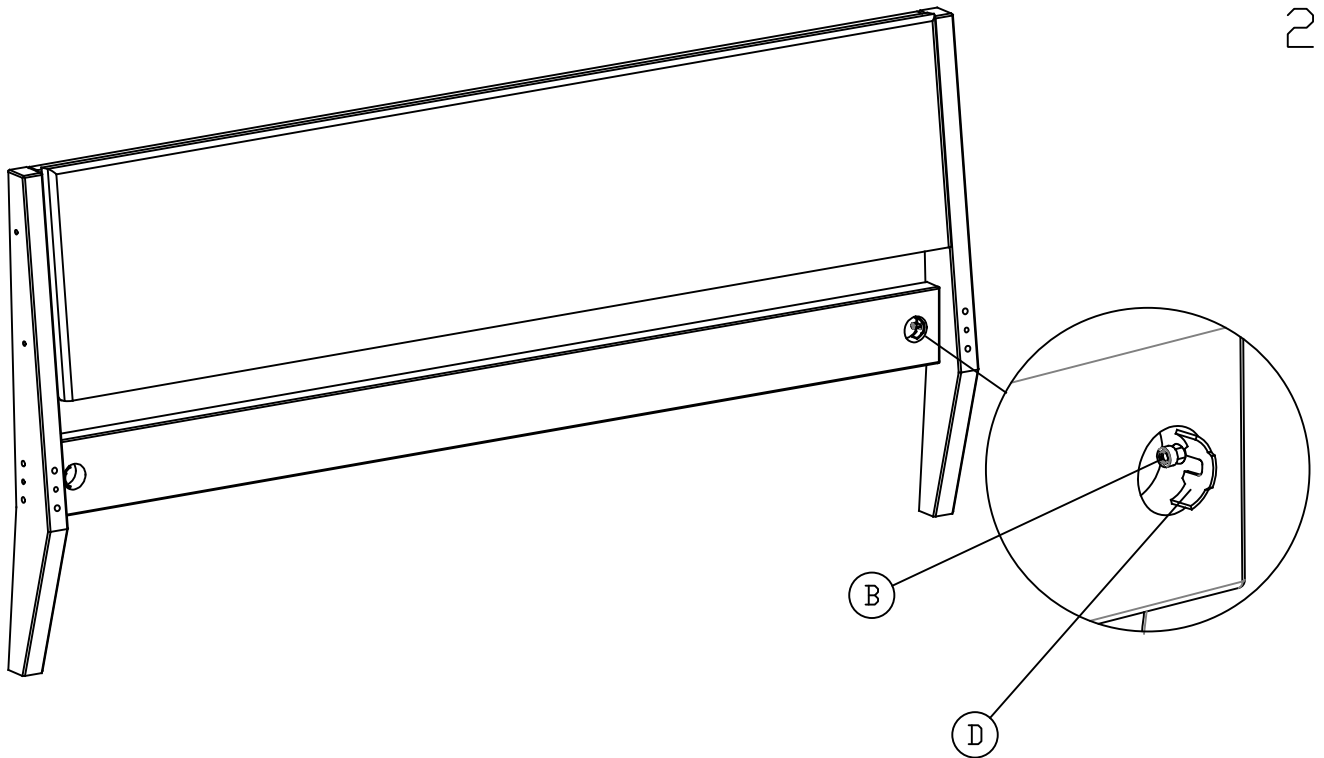
Ø10x40	M6x50	M6x55
		
Ax4	Bx2	Cx4





Dx2

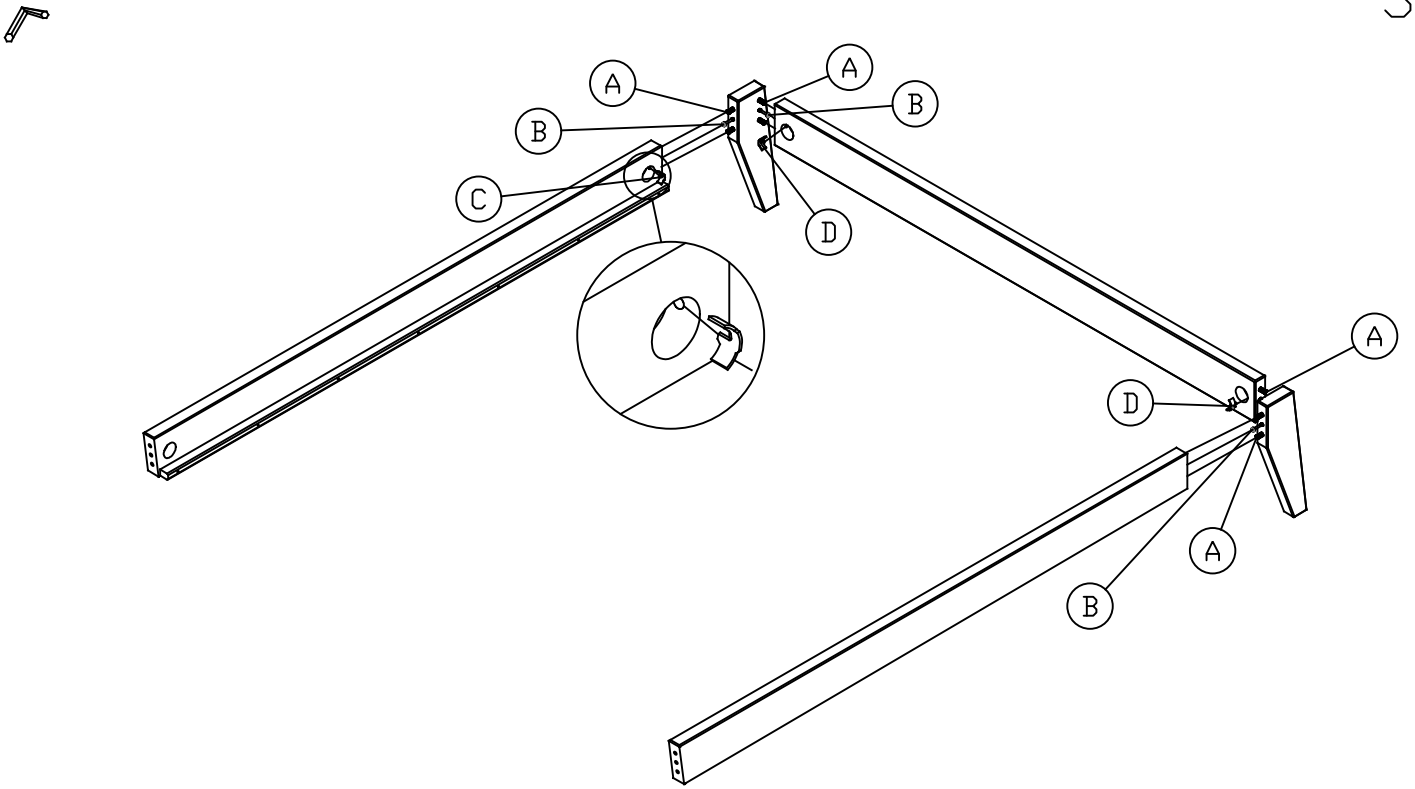






3.

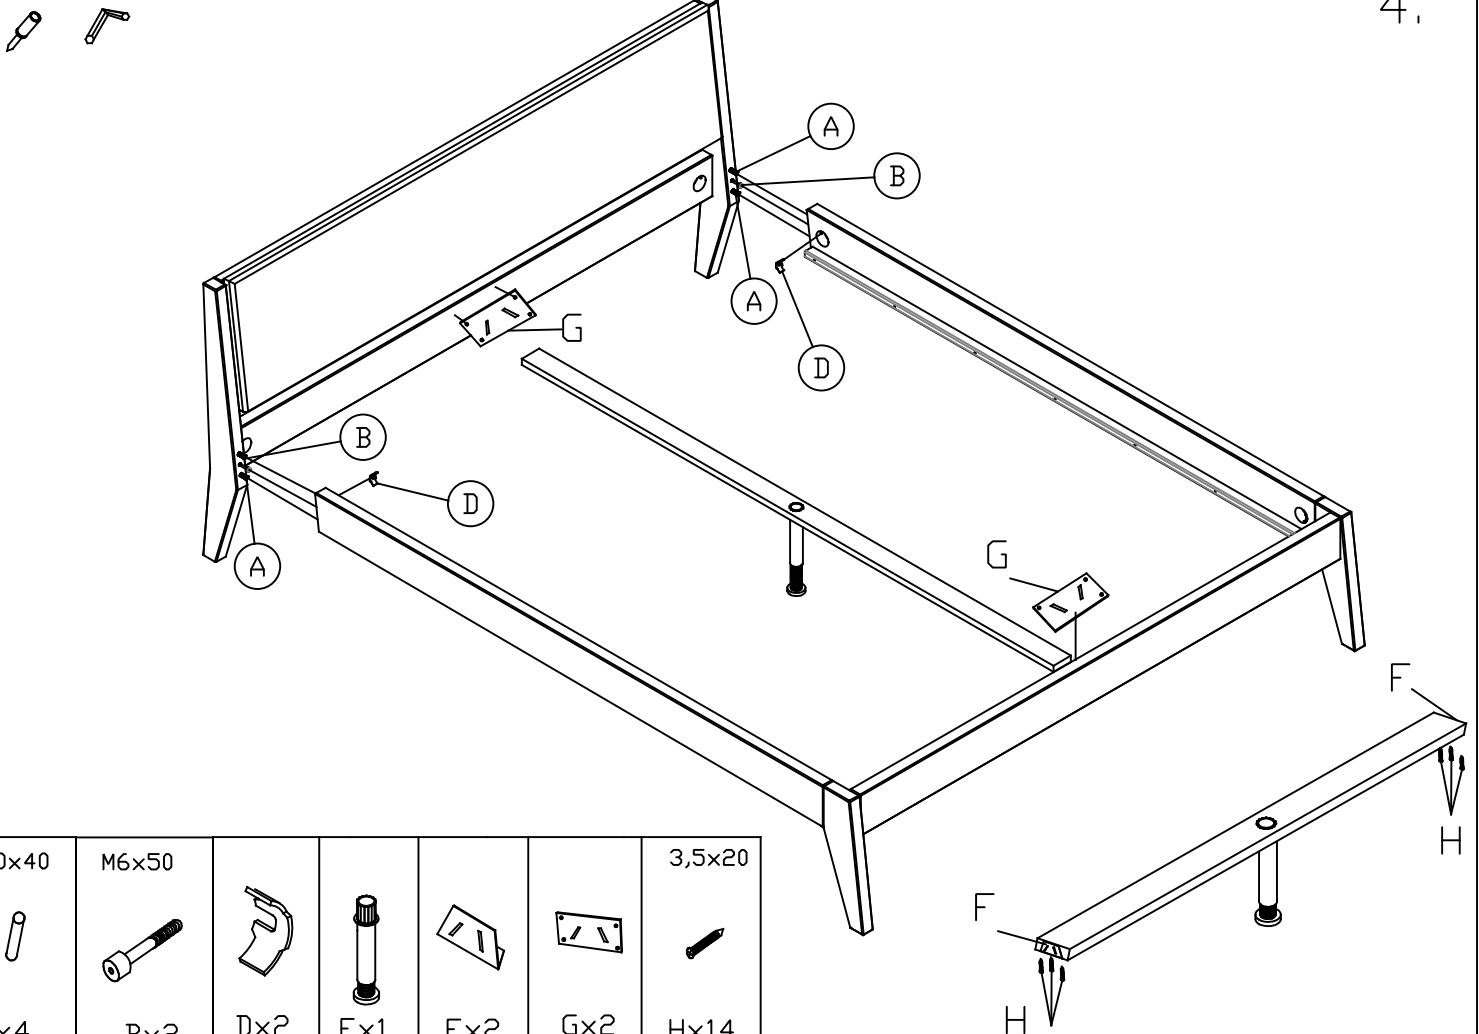

∅10×40	M6×50	
		
A×8	B×4	D×4

4.



∅10×40	M6×50					3,5×20
						
A×4	B×2	D×2	E×1	F×2	G×2	H×14