












BED MONACO - ASSEMBLY INSTRUCTION

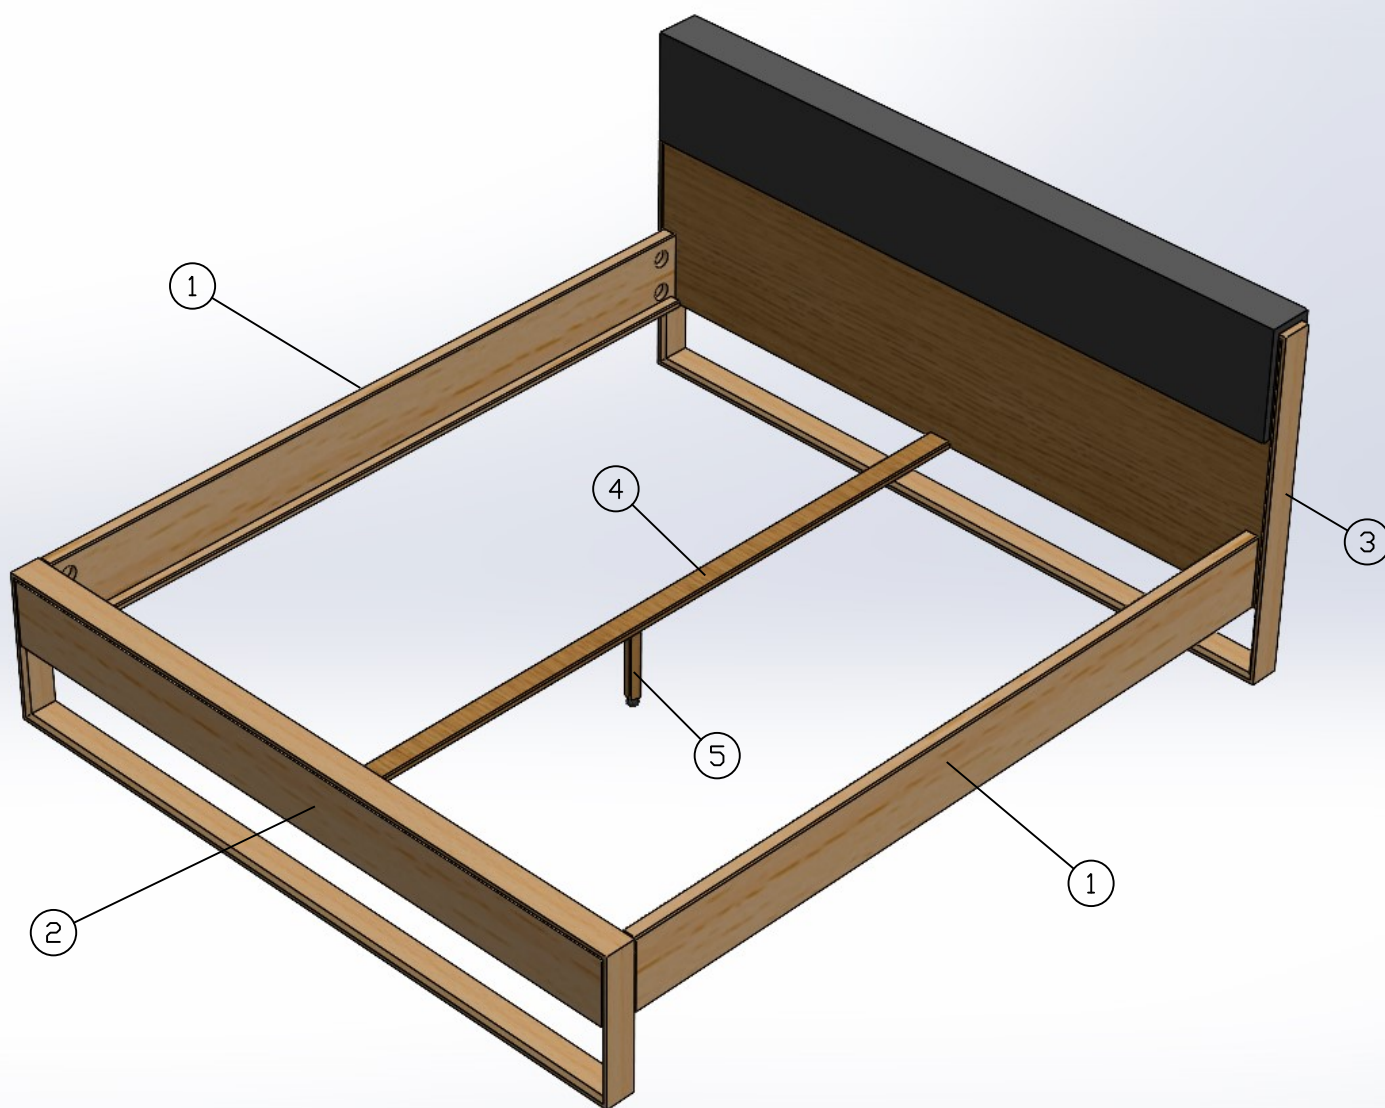


40 Minutes



Ø10x40	M6x45		3,5x16			SW 5
						
Ax8	Bx8	Cx8	Dx14	Ex2	Fx2	1x

1.

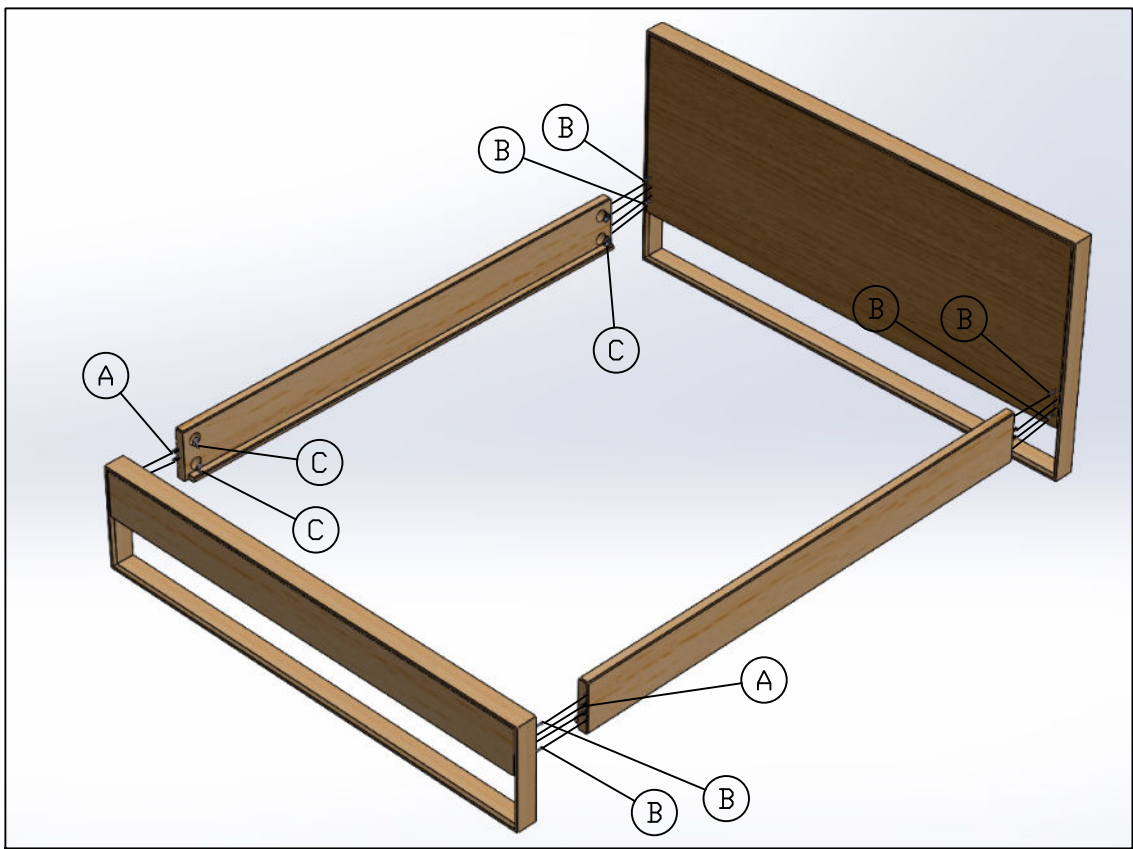

Ø10x40

M6x45







Ax8

Bx8

Cx8

2.

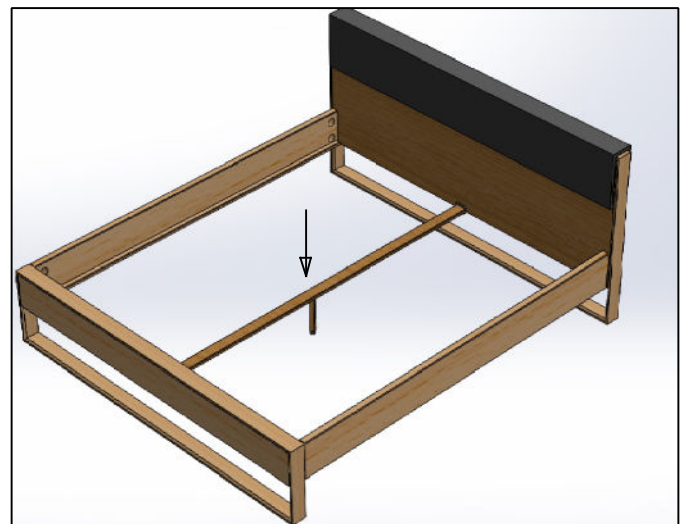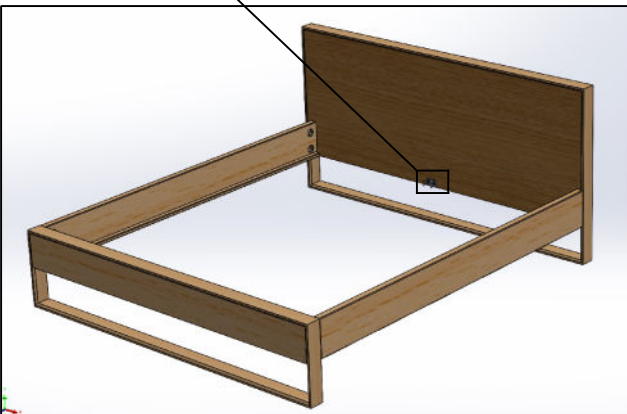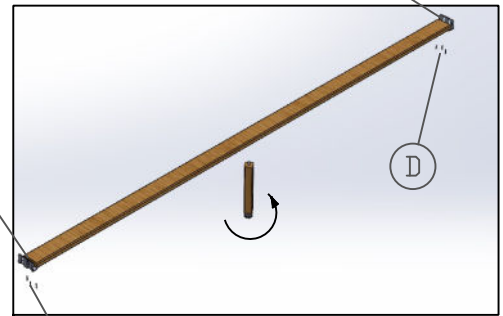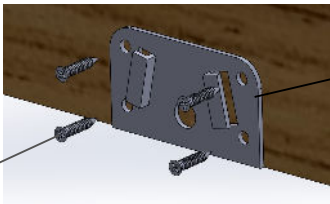

3,5x16



Ex2

Dx14

Fx2