












# BED MONTE - ASSEMBLY INSTRUCTION

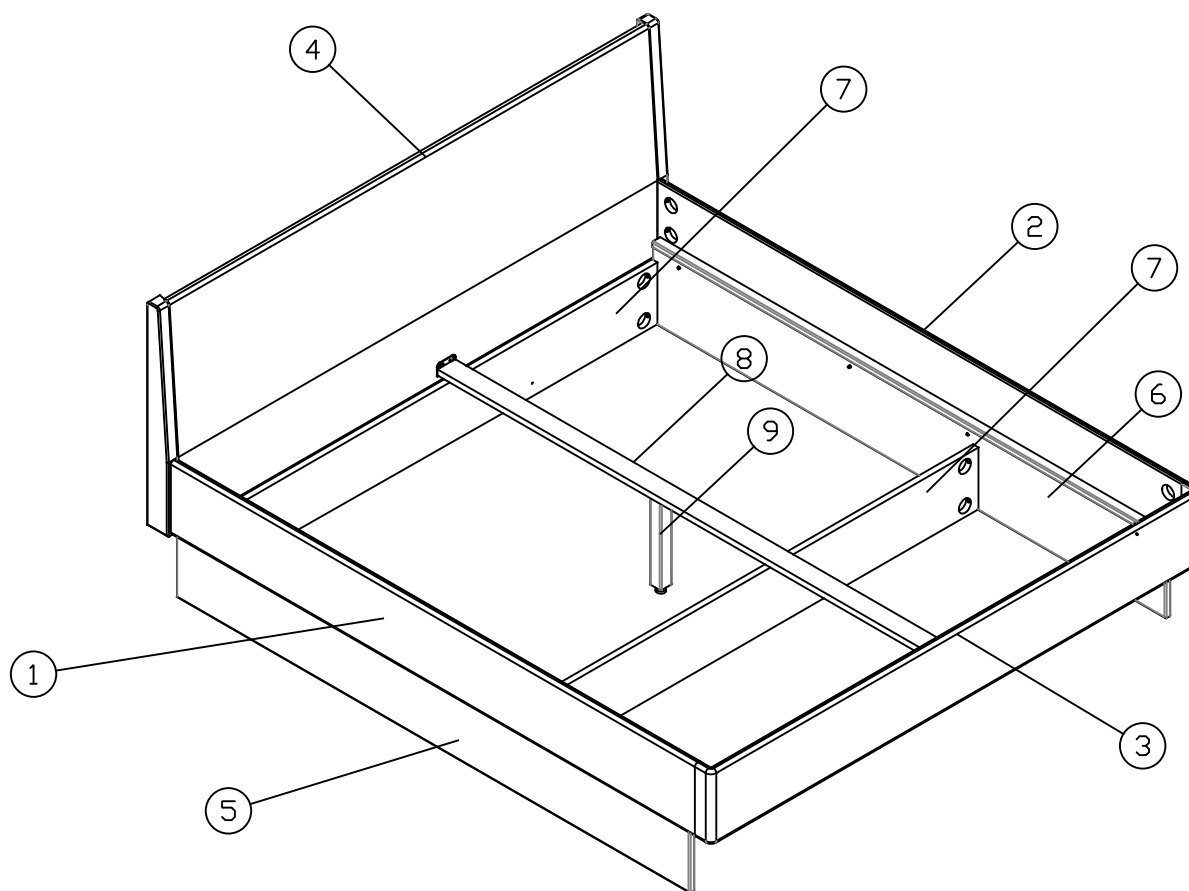






40 Minutes

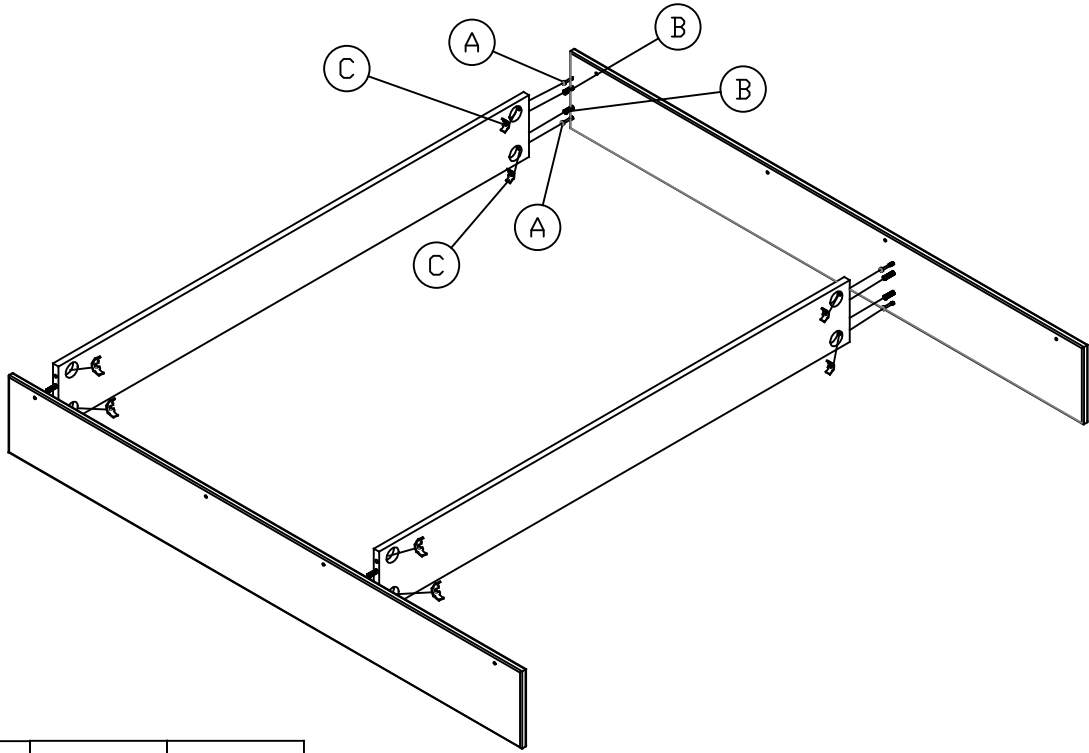


M6x45  Ax16	Ø10x40  Bx16	 Cx16	M6x30  Dx8	SW 4  Ex14	SW 5  Fx2	3,5x16  Gx2	 Hx2	 Ix2
---	---	---	---	---	--	---	--	--



1.






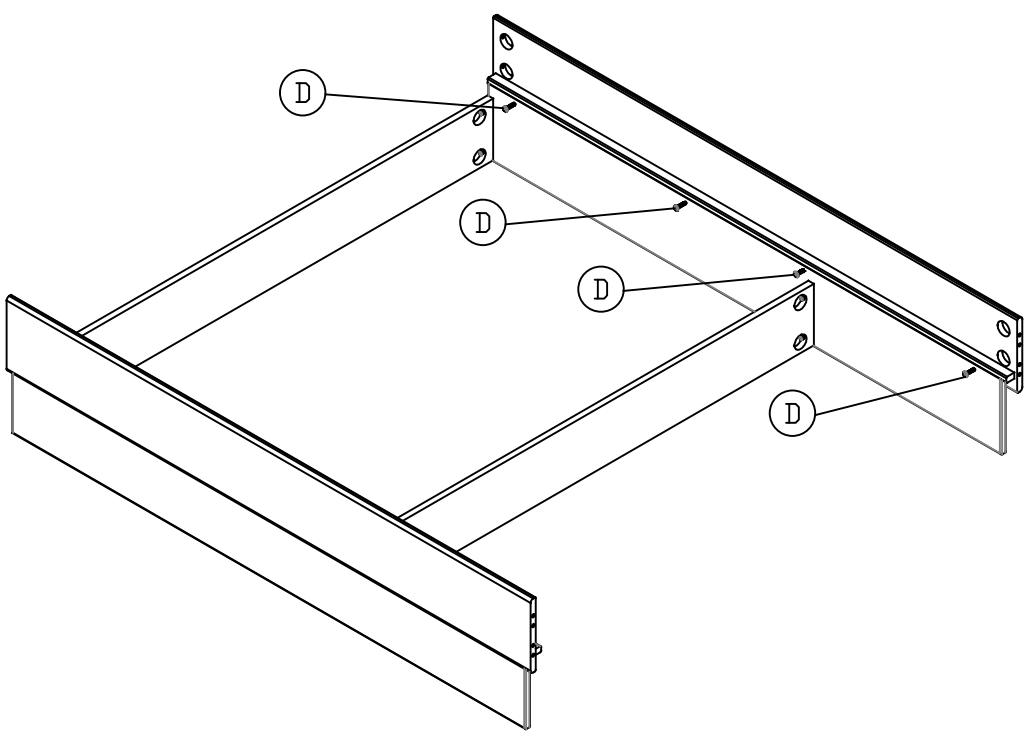

M6x45	Ø10x40		SW 5
			
Ax8	Bx8	Cx8	


2.

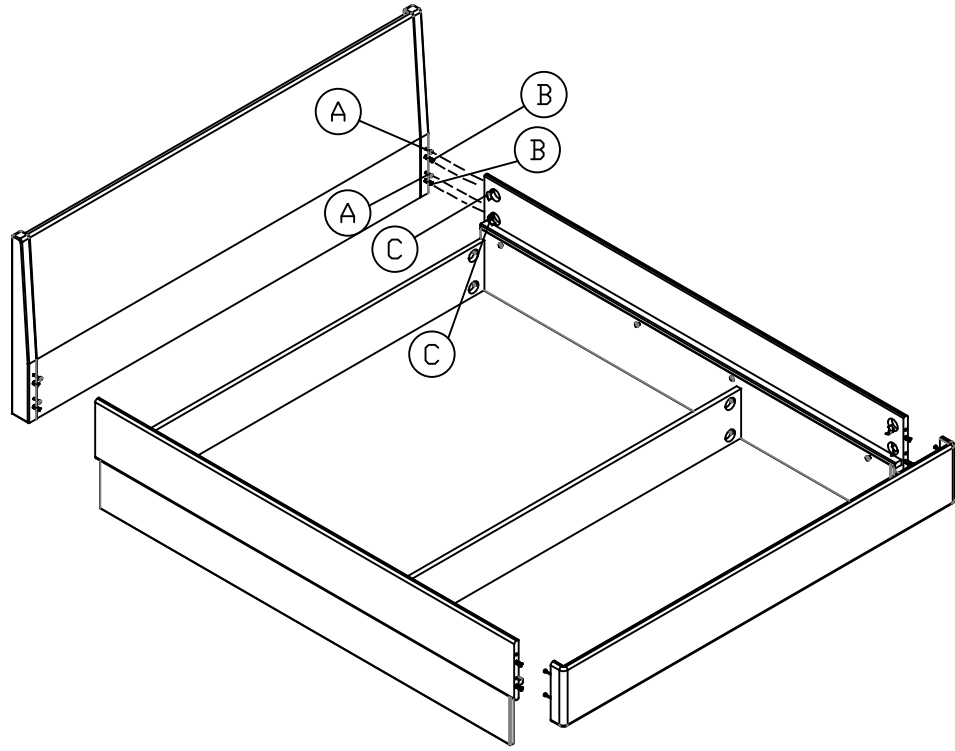





M6x30	SW 4
	
Dx8	

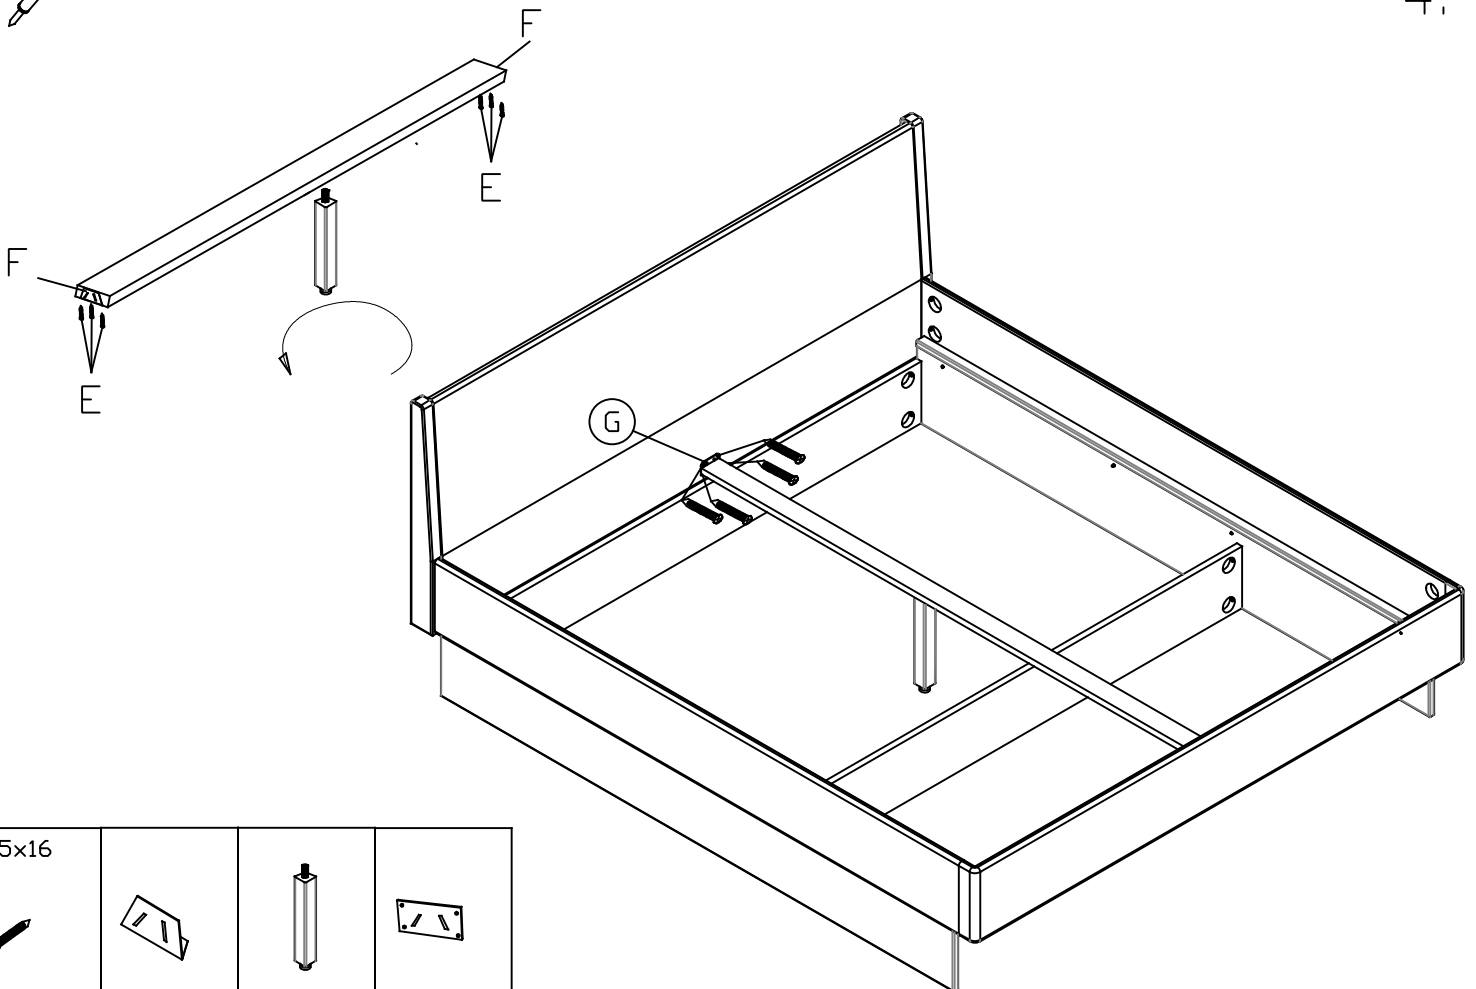

M6x45	Ø10x45		SW 5
			
Ax8	Bx8	Cx8	



3,5x16			
			
Ex14	Fx2	x1	Gx2